



OVEN & GRILL CLEANER

HUSKY® 470

High foaming cleaner quickly penetrates and liquifies baked on food, grease, and carbon deposits from commercial ovens, grills, fryer baskets and other kitchen equipment.

Directions

Oven

- Apply product to bottom, top and sides evenly.
- Allow product to remain for 10 minutes in a warm oven, 25 minutes if in a cold oven.
- Gently agitate soil with synthetic pad or brush.
- Rinse thoroughly with a damp cloth or sponge.
- Heat oven to 220°F before cooking additional foods.

Grill Top

- Scrape warm surface with wire brush or grill block to remove excess soil.
- Apply product to grill and allow to remain 3 minutes.
- Gently agitate and remove soil.
- Rinse thoroughly.



Fast acting on hot or cold surfaces.

Specs

Dilution: RTU
pH Level: 13.0-14.0
Color: Colorless
Fragrance: Mild
Pack Types: Quart, Gallon, 55 Gallon

Features

- Quickly Cuts Baked on Food, Grease, and Carbon Deposits
- Deep Cleaning
- Non-Flammable
- High-Foaming
- Phosphate Free
- Biodegradable

Recommended For

- Ovens
- Grills
- Broilers
- Fryers
- Steamers
- Cook and Hold Ovens
- Rotisserie Ovens
- Drip Pans

Kentucky Cleaning Solutions, LLC, DBA
BLUEGRASS
JAN/SAN & PAPER SUPPLIES

624 Comanche Trail, Frankfort, KY 40601
 www.BluegrassJanitorial.com
 502-382-8320