

POWERMATE 1202AC / 1204AC PARTS LIST

ITEM	DESCRIPTION	PART #		PART #	
		1202AC	1204AC	1202AC	1204AC
1	1202AC CABLE CLAMP	B02200	B02200	1	1
2	LEVER, VALVE, G00525	D00352-3	D00352-3	1	1
3	1/4 BARB X 1/4MP NYLON	A00065P	A00065P	1	1
4	WARNING LABEL 'TO AVOID ELECTRIC SHOCK...'	H00564-2	H00564-2	1	1
5	PH VALVE	G00525	G00525	1	1
6	1/8 X 3/4 TUBULAR RIVOT	C00303	C00303	1	1
7	NIPPLE 1/4MP X 1/8MP	A00114B	A00111	1	1
8	SCREW CLAMP 1/4 HOSE	J00651	J00651	1	1
9	CORD HOOK SET 1 1/4'	02494A	02494-1A	1	1
10	HANDLE, ONE PIECE, 1202	D02336	D02382	1	1
11	1/4 BRAIDED HOSE	J00596	J00596	4	4
12	8-32 X 3/8 RH MACHINE BLACK PHILLIPS SS	C00310-38	C00310-38	25	25
13	16/3 POWERCORD, ORGANGE (PW CORD 25FT)	B00220	B00217-1	1	1
14	COVER, SWITCH, ROCKER	B00214-2	B00214-2	1	1
15	SWITCH, ROCKET, LIT GREEN, 115/230 V 20A	B02211-1	B02211-1	1	1
16	WHEEL, 4.25 X 3/8	G02531-1	G02531-1	2	2
17	AXLE ASSEMBLY	82331-2A	82331-2A	1	1
18	10-32 X 1 1/8 TRUSS HEAD BLACK ZINC	C00312-1	C00312-1	2	2
19	LIQUID TIGHT STRAIN 3/8'NPT WITH NUT	B02212	B02212	1	1
20	MOTOR HOUSING ASSEM.	82490A	82490A	1	1
21	SUCTION HEAD LENS	82491A	82491A	1	1
22	BOTTOM COVER	F02492	F02492	1	1
23	BELT ACCESS COVER	F02493	F02493	1	1
24	MOTOR STRAP ASSEMBLY	82363A	82363A	2	2
25	BEARING SHAFT ASSEM.	82424A	82424A	1	1
26	1202AC BRUSH BEARING	G00528-3	G00528-3	2	2
27	BRUSH ASSMBLY	80508-1A	80508-1A	1	1
28	MOTOR BELT	E02445	E02445	1	1
29	WEIGHT BLOCK	D00356-4	D00356-4	1	1

POWERMATE 1202AC / 1204AC PARTS LIST

ITEM	DESCRIPTION	PART #		P/ASSY	
		1202AC	1204AC	1202AC	1204AC
30	SPRAY TIP 10010X 1/8 MP, BRASS	A00091-1	A00091-1	1	1
31	UE WIRE ASSEMBLY	00185-6A	00185-6A	1	1
32	4' NYLON TIE	B00190	B00190	1	1
33	MOTOR SEAL GASKET	E03428	E03428	1	1
34	PW 1202AC MOTOR	G00539	G00539	1	1
35	QD 1/8M X 1/8FP BRASS (QD 1/4F X 1/4FP BRASS FEMA	A00107	A00102	1	1
36	45EL 1/4MP X 1/4FP		A00053	1	1
EXTRA ITEMS					
2.3.5.6.	VALVE ASSEMBLY, SHORT LEVER, 320AC,321AC	00525A	00525A	1	1
13 ASS.	PW ADAPTOR	B00216	B00216	1	1

1202AC/1204AC PARTS LIST

