

HOW TO OPERATE:



Personal Protective Equipment:

- Removing the basket - wear heat resistant gloves when removing the basket. Do not put their bare hands in the water as it is hot.
- Sensitive skin - rubber washing up gloves or similar should be used when sensitivity to detergent solution occurs. The cleaning solution is not toxic or corrosive and will not harm skin or clothes.

Getting started:

- Check unit is plugged into the wall socket and switched on. At least one light should be on.
- Ensure water is filled to water level line indicated on inside back wall of tank.
- Ensure the water is hot - 180 degrees F.
- Wear safety equipment – insulated rubber gloves (water is hot)

Loading the Spectank®:

- Lift the lid. Ensure it is secure and will not fall down.
- By holding the handles of the basket, slowly raise the basket, using gloves.
- Support the basket by inserting the hooks in the side of the tank into the holes in the side of the handle. Ensure the basket is raised to either the lowest or second lowest hole.
- Load the **Spectank®** basket with equipment to be cleaned. Always stand trays, tins, etc on their side.
- Slightly lift basket and remove off hooks on side of the tank.
- Slowly submerge basket into solution – water will splash up if allowed to submerge too quickly.
- Fill **Spectank®** with additional equipment.
- Close lid
- Allow to soak for between 1 and 24 hours as required. Very dirty items will require a longer soak time.

Unloading the Spectank®

- Lift the lid - ensure it is secure and will not fall down.
- By holding the handles of the basket, slowly raise the basket using heat resistant gloves.
- Support the basket by inserting the hooks in the side of the tank into the holes in the side of the handle. Ensure the basket is raised to either the lowest or second lowest hole.
- Remove equipment making sure to be using heat resistant rubber gloves (equipment and water is hot).
- Rinse equipment thoroughly with clean warm water.
- Reload the **Spectank®** basket with additional equipment to be cleaned.
- Lower basket as above and close lid.

Maintenance:

Daily


- Ensure that the tank remains turned on and that the light on side is glowing. The cleaning solution must be hot and steam should be visible when the lid is opened.
- Check water level and top up with clean water as required. Never drain the solution from the **Spectank®**.

Weekly


- Clean **Spectank®** outside area only with a damp cloth
- Skim any excess fats/oils on the surface of the water and dispose of it in the waste bin.

Monthly


- The **Spectank®** representative will perform the monthly chemical change and service.

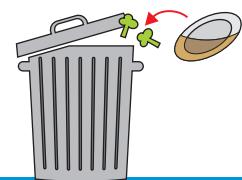

1. DISCARD LEFT OVERS

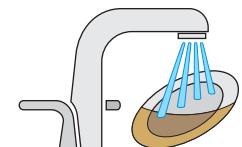


2. RINSE EQUIPMENT WITH WATER

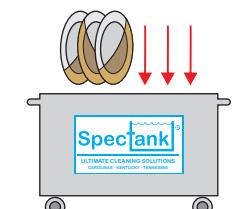


3. LOAD SPECTANK



4. SOAK FOR REQUIRED TIME

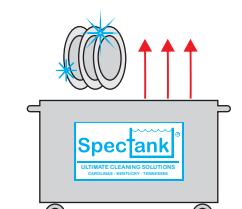

5. UNLOAD SPECTANK

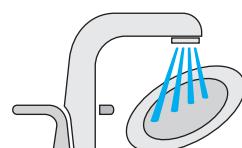

6. RINSE WITH WATER



7. ENJOY SPARKLING EQUIPMENT



+1 336 944 8033

gavin@spectank-carolinas.com

www.spectank-carolinas.com

CHARLOTTE, NC